

# MOUNTING ISTRUCTIONS V1.4

Code: **AWO447**Name: **CASING DVR/SMALL PLUS** 

Metal enclosure for CCTV recorder

**IM447** 

Edition: 6 z from 09.10.2023



#### 1. Destination:

Enclosures construction is compliant with requirements of General Data Protection Regulation (GDPR), as personal data must be protected and stored securely.

Enclosure, protects recorder against unauthorized access or theft, is made of 1 mm thick steel. Set includes two keys (different code) for each of two locks and tamper switch indicating enclosure opening.

### Possibility of mounting:

- AWO445BR bracket to "hang" the enclosure e.g. under tabletop, etc...
- **ARAW45** fan with temperature sensor 45°C

## 2. Specifications:

**Table 1. Electrical parameters.** 

Tamper switch protection	1 x microswitch: opening of enclosure 0,5 A; 50 V DC max. NC - normally closed contacts
Protection class EN 62368-1	I (first)
Rated current of protective connection	6 A max
Declarations, warranty	CE, 2 years

Table 2. Mechanical parameters.

External dimensions of enclosure	W=400, H+H <sub>3</sub> =99+14, D=430 [+/-2 mm]
External dimensions of front panel	W <sub>1</sub> =405, H <sub>1</sub> =105 [+/-2 mm]
Dimensions of recorder space	W <sub>2</sub> =355, H <sub>2</sub> =90, D <sub>2</sub> =360 [+/-2 mm]
	sheet steel DC01, thickness: 1,0mm
Material	corrosion protection
	Color: RAL 9003
Closing	Lock x 2 pcs (different code)
Destination	inside
Net/gross weight	4,50 / 4,85 [kg]
	distance from wall 14mm
Notes:	possibility to mount a bracket to "hang" the enclosure - AWO445BR
	possibility to install <b>ARAW45</b> fan

Table 3. Operating parameters.

ranic or operating parameters.	
Protection grade EN60529	IP20
Operating temperature	-10°C+40°C
Storage temperature	-20°C+60°C
Relative humidity	20%90%, without condensation
Sinusoidal vibrations during operation	
Impulse waves during operation	unacceptable
Direct insolation	
Vibrations and impulse waves during	PN-83/T-42106
transport	FIV-03/1-42100

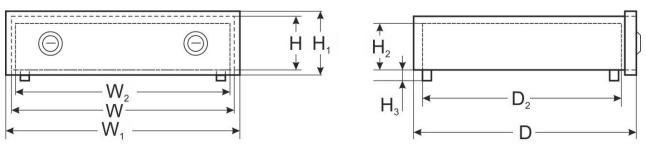


Figure 1. Dimensions.



Figure 2. View of enclosure.



Figure 3. Sample assembly – Fan ARAW45 / recorder / Mounting AWO445BR

Pulsar sp. j.
Siedlec 150, 32-744 Łapczyca, Poland
Tel. (+48) 14-610-19-45
e-mail: sales@pulsar.pl
http:// www.pulsar.pl







