
Pulsai

CODE:S64-Bv.1.3/IVTYPE:S64-B 6-port switch with buffer power supply for 4 IP cameras

EN**

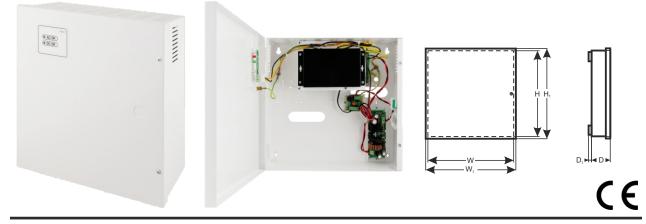

Features:

- Uninterruptible power supply of 4 IP cameras (52 V DC)
- Switch 6 ports 4 PoE ports 10/100 Mb/s (data transfer and power supply)
- 2 ports 10/100 Mb/s (UP LINK) • Long Range mode (up to 250m)
- 30 W for each PoE port, supports devices complaint with the IEEE802.3af/at (PoE+) standard
- Approximate backup time: 2h

- Metal enclosure color white RAL 9003 with battery space for a 7 Ah/12 V battery Supports auto-learning and auto-aging of
- Supports auto-learning and auto-aging of MAC addresses (1K size)
- warranty 2 year from the production date

DESCRIPTION

The S64-B is dedicated for uninterruptible power supply of 4 IP cameras (52 V DC power supply).

- The main elements of this system include:
- 6 port PoE switch
- 13,8 V buffer power supply with a single 1 x 7 Ah / 12 V battery
- A converter (DC/DC52115) increasing the voltage to 52 V DC (supply of the PoE switch)

In case of power decay, a battery back-up is activated immediately.

The approximate backup time is given assuming that all output ports are used (using typical devices and 7Ah batteria). The electricity consumption for own needs and the energy efficiency of the power intake track were taken into account. The exact description of how to perform the calculations can be found at: <u>"Approximate backup time - assumptions for calculations"</u>.

Automatic detection of any devices powered in the PoE/PoE+ standard is enabled at the 1-4 ports of the switch. The UP LINK ports is used for connection of another network device e.g. recorder. The LEDs at the front panel indicate the operation status.

The switch is housed in a metal enclosure (color RAL 9003) which can accommodate a 1x7 Ah/12 V battery. The enclosure features a micro switch tamper indicating door opening (front panel). The S64-B is fitted with two LEDs on the front panel (red LED - indicates the presence of 230 V supply voltage, green LED indicates the presence of DC voltage).

The PoE technology ensures a network connection and reduces installation costs by eliminating the need to supply a separate power cable for each device. This method allows supplying other network devices, such as IP phone, wireless access point or router.



PARAMETERS OF THE SWITCH

Ports	6 10/100Mb/s ports (4 x PoE + 2 x UP LINK)	
	with connection speed auto-negotiation and MDI/MDIX Auto Cross	
PoE power supply	IEEE 802.3af/at (1÷4 ports), 52 V DC / 30 W at each port *	
Long Range mode	Long Range, VLAN	
Protocols, Standards	IEEE802.3, 802.3u, 802.3x CSMA/CD, TCP/IP	
Bandwidth	1,6Gbps	
Transmission method	Store-and-Forward	
Optical indication of	Switch power supply;	
operation	Link/Act;	
	PoE Status	

* The given value of 30 W per port is the maximum value. The total power consumption should not exceed 48 W.

ELECTRICAL PARAMETERS

Mains supply	~200-240 V; 50Hz
Current up to	0,7 A
Supply power	55 W
Output current at the PoE ports (RJ45)	4 x 0,6 A ΣI=1 A (max.)
Output voltage at the PoE ports (RJ45)	52 V DC
Short-circuit protection SCP and	105% ÷ 150% PSU power, manual restart
overload protection OLP	(the fault requires disconnection of the DC output circuit)
PSU current consumption	250 mA/13,8 V DC
Battery charge current	0,5 A max. /1x7 Ah (+/-5%)
Approximate backup time	2h
Battery circuit protection SCP and	melting fuse
reverse polarity connection	mening use
Deep discharge battery protection UVP	U<9,5 V (\pm 5%) – disconnect of connection battery
Sabotage protection:	
- TAMPER output indicating enclosure	 microswitch, NC contacts (enclosure closed),
opening	0,5 A@50 V DC (max.)

MECHANICAL PARAMETERS

Dimensions	W=280, H=291, D+D ₁ =82+8 [+/- 2mm]	
Dimensions	W ₁ =285, H ₁ =295 [+/- 2mm]	
The dimensions of the battery	170 x 110 x 65mm (WxHxD) max	
compartment		
Gross/Net weight	2,6 / 2,8 kg	
Enclosure	Steel plate, DC01 1,0mm color white RAL 9003	
Closing	Cheese head screw x 2 (at the front), (lock assembly possible)	
Connectors	Power supply of the cameras: RJ45 socket	
	Input 230 V: Φ 0,63-2,50 (AWG 22-10)	
	Battery output BAT: 6,3F-2,5	
	TAMPER output: wires	
Notes	The enclosure does not touch the assembly surface so that cables can be	
NOICS	led.	